

SONIFI

— How to Replace or Install a New STB in an RF Environment

This quick guide provides the steps to install a Set Top Box (STB) at a Marriott GRE site with an RF infrastructure.

Before Starting

- Locate the LG Master remote
- Use the table to the right to identify the correct STB zone. Note the zone number as it will be needed later.

STB Installation

With the television on, connect the cables into the following ports on the STB. **Ports must be connected in the order shown below.**

- POWER
- HDMI OUT
- ANTENNA CABLE/IN
- LAN
- MPI/MTI TELEVISION CONTROL

The LED on the STB should be solid red.


BEFORE STARTING

Locate Zone

In-Room TVs Installed at the Property	TV Resolution	STB Zone
LG Only or Non-LG Only	720p	0
	1080p	1
Mix of LG and Non-LG Models	LG 720p	0
	LG 1080p	1
	Non-LG 720p	4
	Non-LG 1080p	5


— STB Configuration

1. Press the **Power** button on the LG Master remote. The light on the STB will start blinking and the TV may display a “no signal” message or snowy screen during STB boot up.


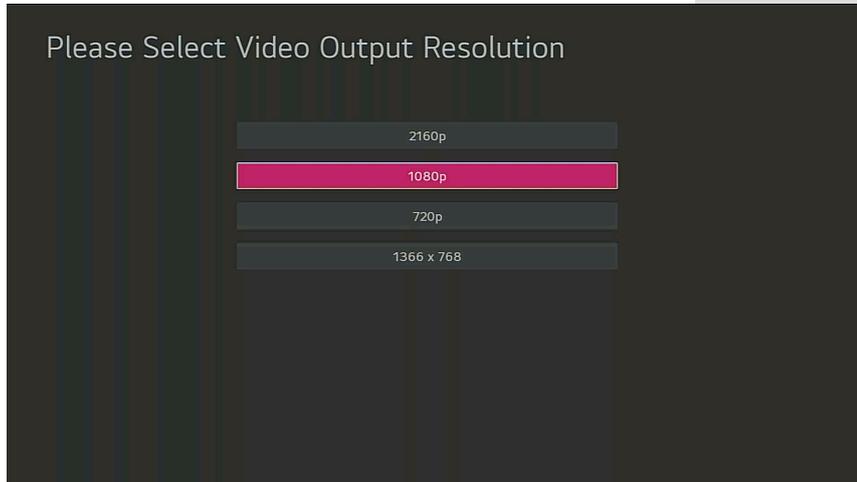


Use the arrow keys on the tv remote, to navigate to the desired resolution.

2. Press **OK ENTER** on the remote in order to make selection.
3. Select the **Solution Settings (Normal Configuration)**.

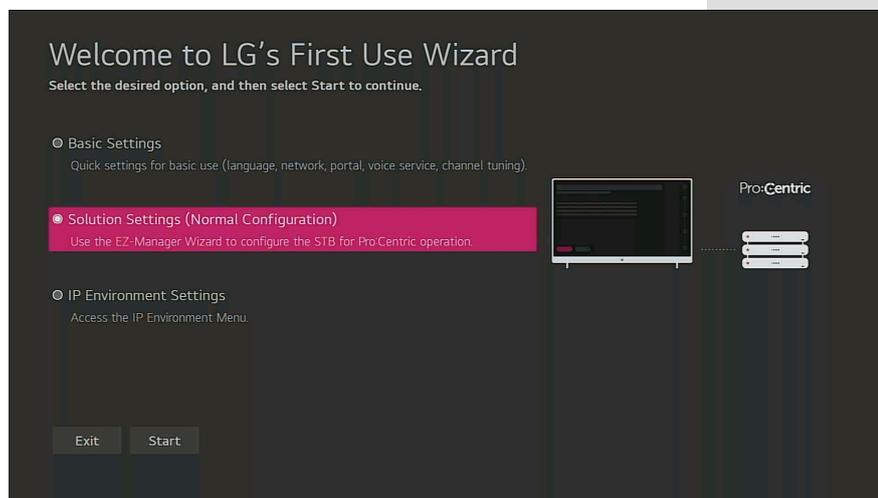

- Navigate to **Start**.
- Select **Zones & Room Number**.

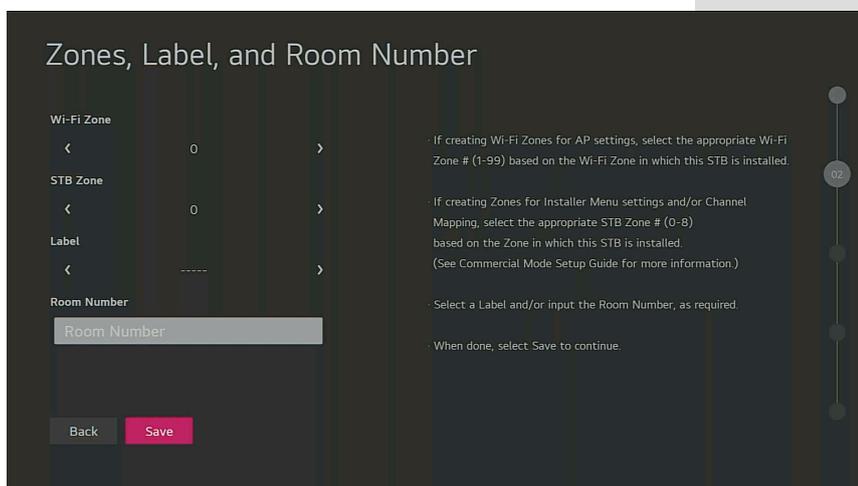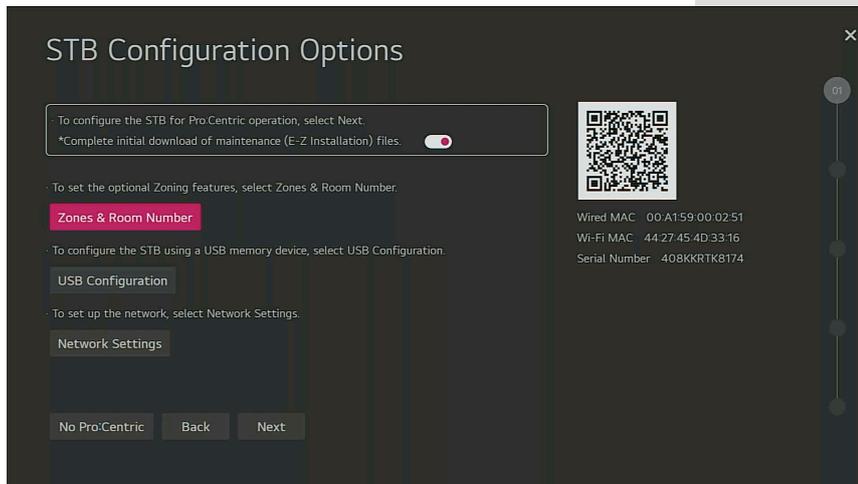


- Select the **STB Zone** to the zone number noted earlier.
- Use the number keys on the remote to enter a **Room Number**.

EX: 1234 for a single room.
EX: 1234_A and 1234_B for multiple TV rooms.

- Navigate to **Save**.
- Select **Next**. The Welcome to LG's First Use Wizard screen will open.
- Select **Next**. The Configure Pro:Centric Server screen will open with the Standard Pro:Centric Server settings selected.




9. Select **Next**. The Searching for Pro:Centric Server screen will open.

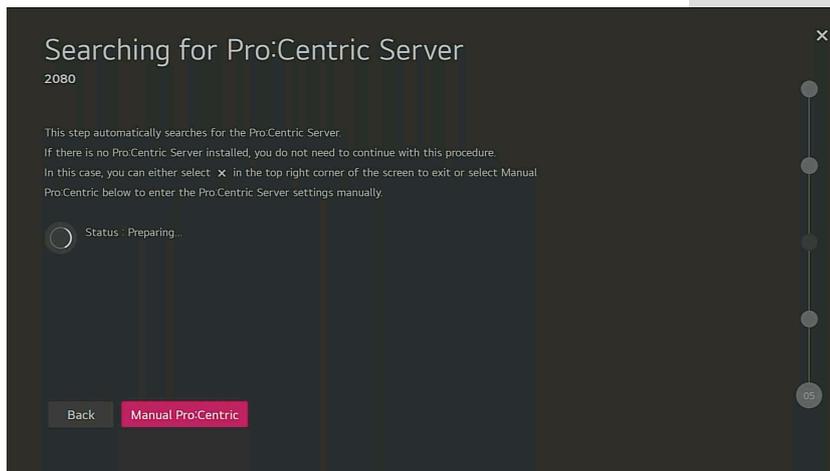

If the data channel is not known:


- Allow the system to complete the digital scan for the RF data channel
- Select **Next**.

- If the data channel is known:
 - Select **Manual Pro:Centric**.
 - Within Pro:Centric Manual Configuration configure, Pro:centric mode, media type and Data channel.

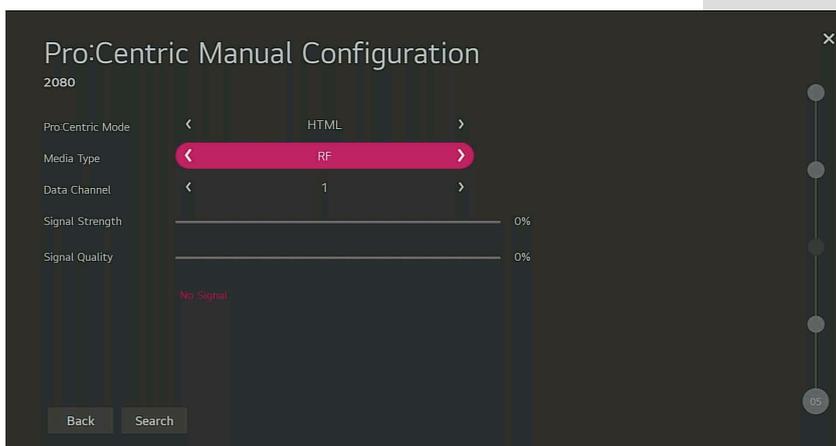

- Mode: **HTML**
- Media Type: **RF**
- Enter the Known Data Channel

- Select **Search**. The STB will search for the server.
13. The Processing Pro:Centric Configuration screen will open followed by the EZ-Manager Configuration Complete screen.
- Reboot Quickly

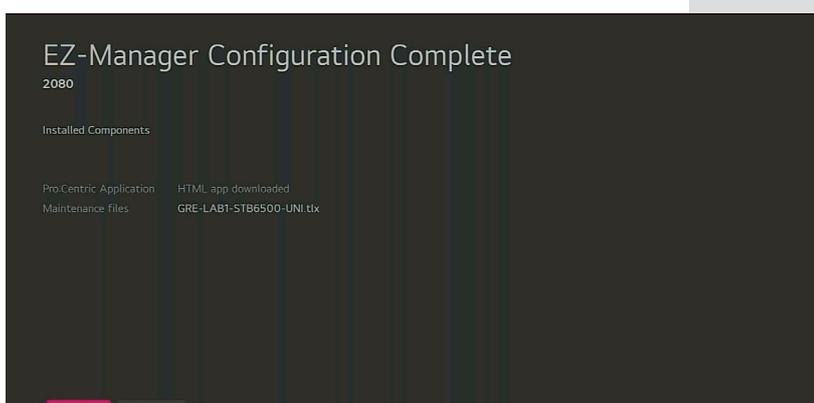

This defaults to turn off.

Notes:

If STB is defaulted to turn off, allow the STB five minutes to complete configuration then power cycle the STB.

Loading may take a while, and the display may show “no signal” or a snowy screen while loading.

SONIFI Support Notification

After configuring the STB, please notify the SONIFI Support Team at **support@sonifi.com**

1. Enter STB Support as the email Subject.
2. In the email body, provide the following information:
 - MARSHA code or detailed property name.
 - STB Serial Number.
 - The room number the STB was installed in.

STB Factory Reset

If you made a mistake during configuration, need to move the STB to another room, or have other configuration issues, follow the steps in the STB In-Stop document to perform a factory reset.